

2953WCA

29" x 53" x 42"

INSTALLATION: It is important that all leveling feet are completely touching the floor and level for the door system to work properly.

GENERAL SPECIFICATIONS:

Material Gel coat

Plumbed Weight : 202lbs / 93kg

Soaker Weight : 172 lbs / 78kg

Average Fill: 60 gal to above jet level

ELECTRICAL SPECIFICATIONS:

Required Electrical

Service 110 Volt

Air Bath or Whirlpool

1-15 amp GFCI


Whirlpool with Inline Heater

1-15 amp GFCI

Dual Bath

1-20 amp GFCI

Soaker

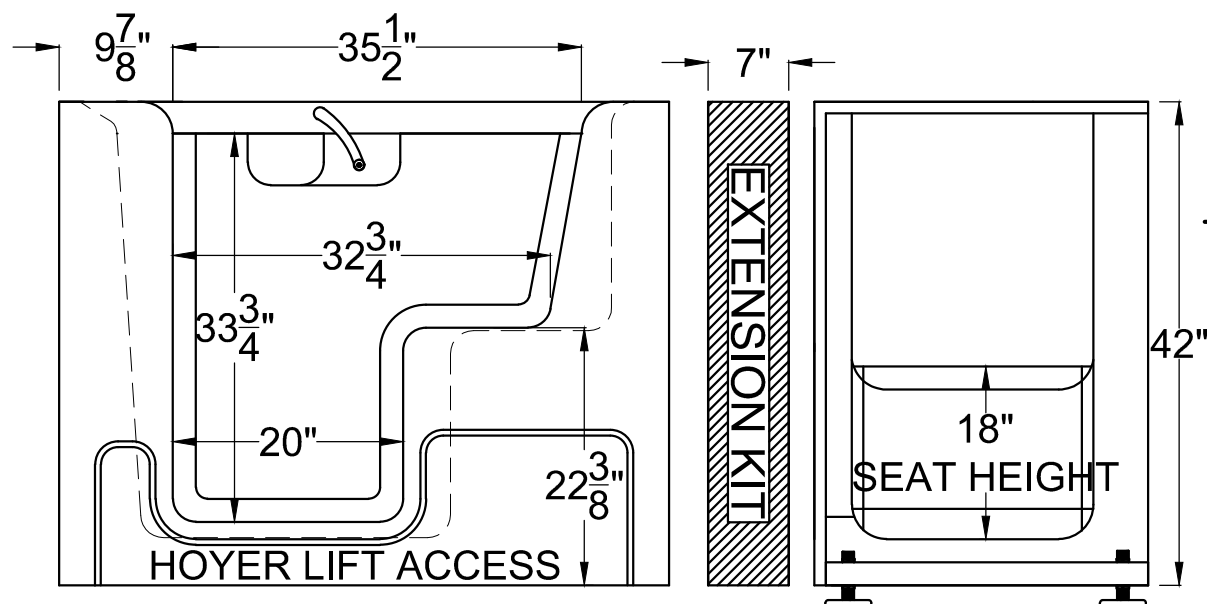

PACKAGES AND OPTIONS

Hydrotherapy Package	Package Contents	Part #
Soaker	Soaking bath - no jets, textured bottom	2953WCAS
Whirlpool	Adjustable pointed-massage jets, 1-hp pump, textured bottom	2953WCAH
Air Bath	Air jets, Air blower, Textured bottom	2953WCAA
Dual Bath	Adjustable pointed-massage jets, 1-hp pump, Air jets, Air blower, textured bottom	2953WCAD

OPTIONS

Colors Available - White

Quick Ship - reduces lead time - call for availability

Inline Heater with Pump - Whirlpool or Dual Bath

Lift & Turn Drain Kit -Chrome,Brushed Nickel, White

Color Match Jets.

Built in tile flange.

IMPORTANT INFORMATION

- Before ordering or installing, please consider future access to equipment.
- Please measure tub on-site before building tub surrounding.
- Jet, pump & blower locations are predetermined and cannot be changed.
- Tub door must remain close when not in uses.
- Please note that installer(s) must be certify or warranty will be voided.
- Specifications and configurations are subject to change without notice.

- Measurements are +1/2" and are subject to change without notice.
- Measurements herein supersede all others published prior to publication date shown below.