


## AL560XL Automatic Universal Power Chair Lift

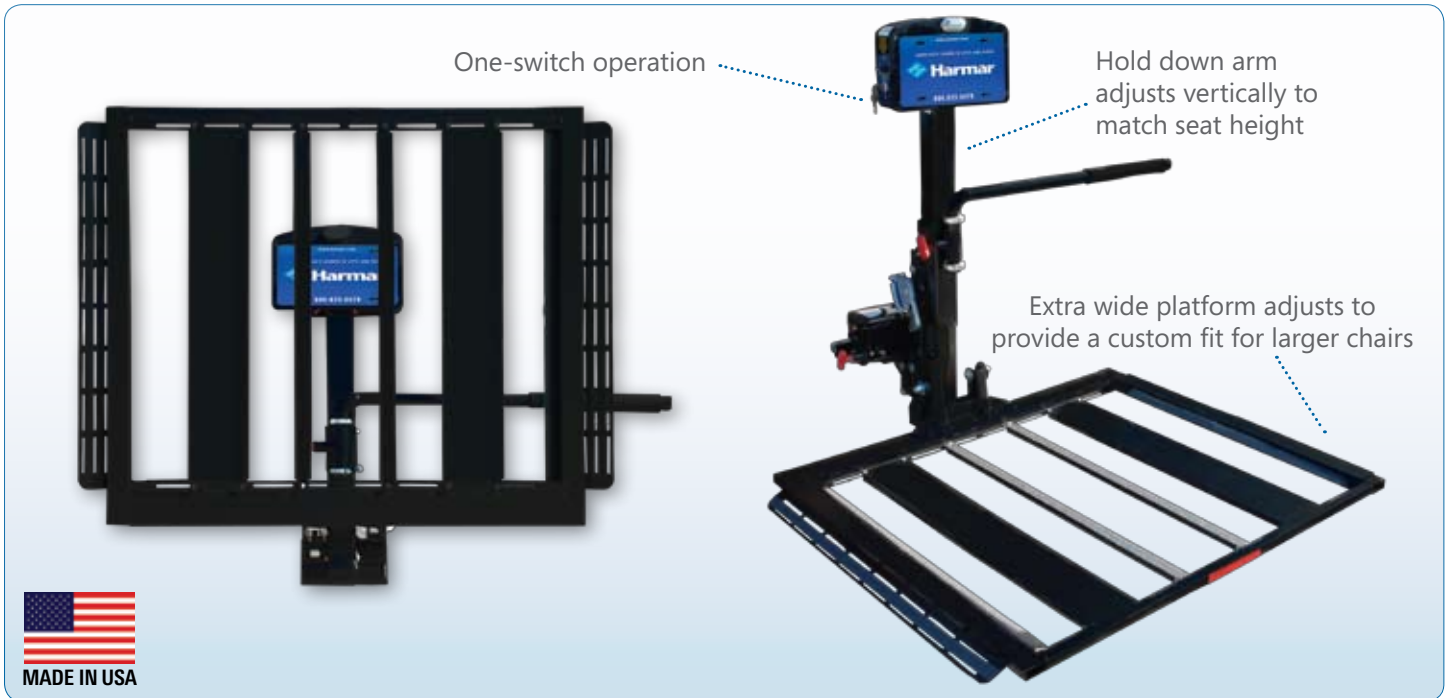

### FEATURES

- Carries larger power chairs
- Padded hold-down arm conveniently secures power chair
- No power chair modifications
- Platform wheel cradles adjust to provide a snug, custom fit
- Manual crank back up & license plate mount included
- Swing-away option available
- Lift folds automatically when unoccupied

### SPECIFICATIONS

Lifting capacity:	350 lbs (160 kgs)
Platform Size (useable space):	32.5" x 38.5", adjustable
Installed weight:	115 lbs (52 kgs)
Hitch height (range):	5" - 19"
Hitch Class:	II or III
Warranty:	3-year transferable

### DESCRIPTION

Harmar's AL560XL is designed to meet the needs of consumers with larger power chairs who need a quick, automatic securing option without modifications to their power chair.

The extra wide adjustable platform and vertically adjustable, padded hold down arm will safely and automatically secure larger power chairs up to 350 lbs. When empty, the platform automatically folds up and out of the way. One switch operation and drive on/off platform make this fully automatic, American Made lift even easier to use!